



## WRAS Approved Wafer Butterfly Valve

- Fits Between Flanges
- Resilient EPDM Seats
- WRAS Approved
- Good for use on Water Distribution
- Sizes 1" - 24"
- Lever and Gearbox Operation
- Stainless Steel 316 Disc

Can be used with



### DESCRIPTION

A WRAS approved resilient seated general purpose wafer pattern butterfly valve. Blue epoxy coated ductile iron body. WRAS Approved EPDM liner, 316 stainless steel disc, notched (throttling) locking lever operator and sizes up to 24".

Lever supplied from 1" - 10" and Gearbox Operator 12" - 24" (gearbox available for all sizes).

The valve has an ISO 5211 top works for direct mounting of electric or pneumatic actuators. Rated PN16 up to 16" and PN10 for 18" and above. Complies with 97/23/CE (PED) Directive CE 1115.

### Technical Information

PN16 rated for 1"-16", PN10 18"- 24"

Temperature 10°C to 120°C

1" to 16" fits PN6, PN10, PN16, ANSI 150, Table D and E flanges.

18" to 24" to fit PN16 Flanges

WRAS Approved valves stocked from 2" -16"



### Description

Wafer butterfly valve having EPDM liner, 316 stainless steel disc and shaft. Suitable to fit between flanges PN6/10/16, ANSI 150, Table D/E. This valve is approved for water distribution and supply, WRAS Certificate. Applications include industrial and water processes industries.



### Beschreibung

Wafer-Absperrklappe mit EPDM-Auskleidung, Edelstahlscheibe 316 und Welle. Geeignet für Flansche PN6 / 10/16, ANSI 150, Tabelle D / E. Dieses Ventil ist für die Wasserverteilung und -versorgung zugelassen, WRAS-Zertifikat. Anwendungen umfassen Industrie- und Wasserprozessindustrie.




### Descripción

Válvula de mariposa tipo wafer con revestimiento de EPDM, disco y eje de acero inoxidable 316. Adecuado para encajar entre bridas PN6 / 10/16, ANSI 150, Tabla D / E. Esta válvula está aprobada para distribución y suministro de agua, certificado WRAS. Las aplicaciones incluyen industrias de procesos industriales y de agua.




### Description

Vanne papillon Wafer avec revêtement EPDM, disque et arbre en acier inoxydable 316. Convient pour s'adapter entre les brides PN6 / 10/16, ANSI 150, tableau D / E. Cette vanne est approuvée pour la distribution et l'approvisionnement en eau, certificat WRAS. Les applications incluent les industries des procédés industriels et de l'eau.

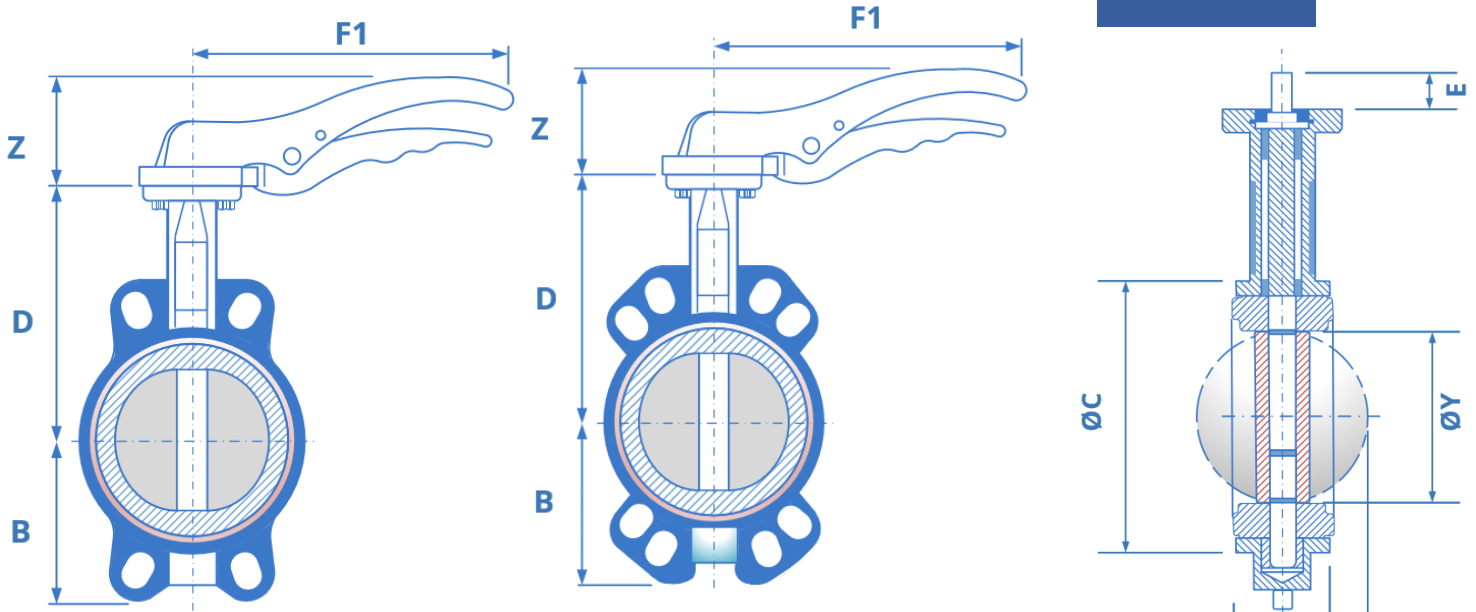



The valves above illustrate locating lugs for alignment of various flanges.

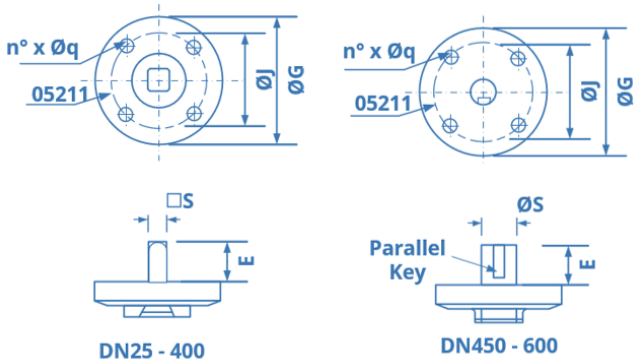

## Dimensions and Weights

Size	A	B	ØC	D	E	R	Z	F1	ØY	KG	ISO	G	J	S	n x q
1"	25	33	51	65	104	32	68	192		1.7	F05	65	50	7	4 x 7
1 1/2"	40	33	63	82	116	21	50	170	27	1.83	F05	65	50	9	4 x 7
2"	50	43	62	89	126	21	50	170	31	2.68	F05	65	50	9	4 x 7
2 1/2"	65	46	69	102	136	21	9	50	170	45	F05	65	50	9	4 x 7
3"	80	46	90	118	150	21	17	69	206	65	F05	65	50	11	4 x 7
4"	100	52	106	150	170	21	26	69	206	90	F05	65	50	11	4 x 7
5"	125	56	119	174	180	27	34	90	285	110	F07	90	70	14	4 x 9
6"	150	56	131	205	200	27	50	90	285	146	F07	90	70	14	4 x 9
8"	200	60	166	260	230	27	71	72	400	194	F10	125	102	17	4 x 11
10"	250	68	202	318	266	27	91	72	530	241	F12	150	125	27	4 x 13
12"	300	78	235	376	292	27	112	-	-	291	F12	150	125	27	4 x 13
14"	350	78	257	406	335	27	128	-	-	324	F12	150	125	27	4 x 13
16"	400	102	292	471	360	27	144	-	-	379	F12	150	125	27	4 x 13
18"	450	114	318	539	422	51.2	163	-	-	428	F14	175	140	38	4 x 18
20"	500	127	355	594	480	64.2	182	-	-	475	F14	175	140	41.15	4 x 18
24"	550	154	444	695	562	70.2	219	-	-	573	F16	210	165	50.65	4 x 22

All information is sourced from our manufacturer's data and is intended for guidance only - Valves Online can accept no liability for changes, omissions or errors.

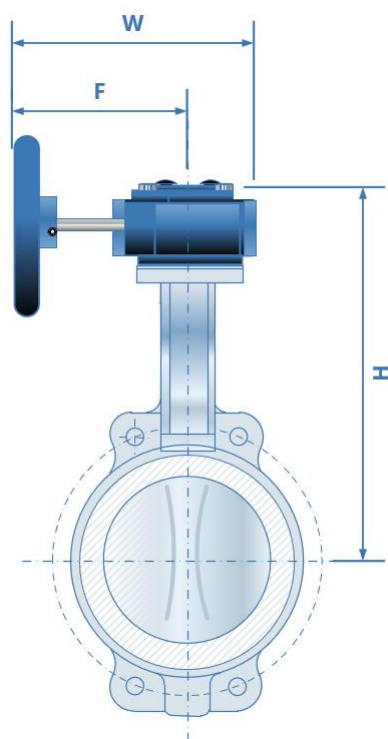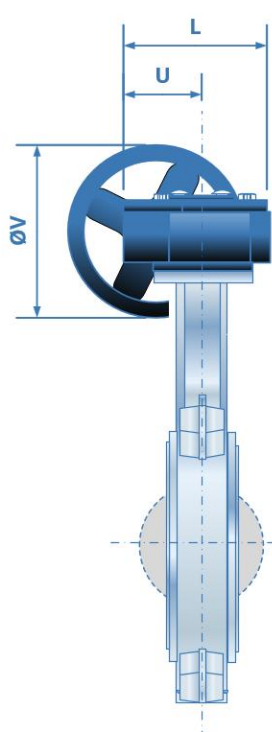


## Dimensions

Size	L	U	H	W	F	V
1"	130	55	169	225	170	150
1 1/2"	130	55	181	225	170	150
2"	130	55	191	225	170	150
2 1/2"	130	55	201	225	170	150
3"	130	55	115	225	170	150
4"	130	55	135	225	170	150
5"	130	55	145	225	170	150
6"	130	55	265	225	170	150
8"	176	77	308	293	215	300
10"	195	85	346	311	226	300
12"	195	85	372	311	226	300
14"	205	124	415	345	260	300
16"	278	118	457	291	167	380
18"	278	118	519	291	167	380
20"	277	107	607	379	207	285
24"	323	131	693	428	256	385

## Operating Torque

Size	3	6	10	16	
1"	25	2.9	3.1	3.3	3.4
1 1/2"	40	7.8	8.4	8.8	9.2
2"	50	11.3	12	13	13
2 1/2"	65	17	18	20	21
3"	80	23	25	26	28
4"	100	33	36	40	44
5"	125	48	54	61	68
6"	150	68	78	88	99
8"	200	120	134	148	162
10"	250	189	212	264	257
12"	300	290	316	342	367
14"	350	298	347	396	550
16"	400	481	551	622	850
18"	450	930	980	1312	1543
20"	500	1250	1350	1848	2112
24"	550	2270	2500	3005	3535

Material List		
1	Body	Epoxy Coated Ductile Iron
2	Disc	Stainless Steel
3	Liner	EPDM, NBR, FKM, PTFE
4	Shaft	Stainless Steel
5	Bushing	PTFE
6	Washer	Galvanised Carbon Steel
7	Circlip ISO 3075	Steel
8	O-Ring	Viton
9	Lever	Aluminium up to 6" Ductile Iron 8" & Above
10	Bolts	Galvanised Carbon Steel

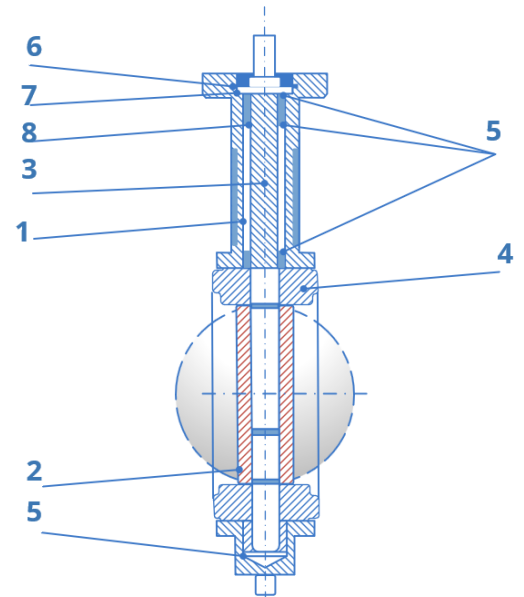

Pressure / Temperature	
Pressure	1" - 16" - PN16
	18" - 24" - PN10
Temperature	EPDM -10°C to 120°C This Product is WRAS Approved
Other Liners Available Non WRAS	NBR -10°C to 80°C
	FKM (Viton) -10°C to 120°C
	PTFE -10°C to 120°C

KV Rates									
Opening	10	20	30	40	50	60	70	80	90
1"									
1 1/2"	0.04	2.1	4.8	10	19	30	48	73	79
2"	0.05	2.6	6	13	23	38	60	91	99
2 1/2"	0.09	3.8	14	33	53	75	98	108	108
3"	0.17	7.8	16	34	60	100	158	237	261
4"	0.26	15	31	67	120	199	314	471	518
5"	0.43	25	53	115	205	339	535	803	883
6"	0.69	39	82	177	316	522	817	1241	1364
8"	2.6	52	142	250	450	713	1122	1723	2716
10"	2.6	130	276	599	1068	1768	2798	4196	4611
12"	3.5	202	427	926	1650	2730	4322	6483	7124
14"	5.2	292	617	1376	2384	3945	6243	9364	10291
16"	6.9	401	849	1839	3279	5425	8585	12878	14152
18"	9.5	531	1124	2437	4342	7185	11371	17057	18743
20"	12	683	1445	3133	5609	9238	14620	21930	24099
24"	19	1055	2234	4840	8626	14272	22587	33882	37232


These valves are suitable for heating and conditioning (HVAC), water treatment and water distribution, industrial applications, agricultural purposes for compressed air, gas, oils and hydrocarbons.





**Fitted with Switchbox or inductive Sensors**

All information is sourced from our manufacturer's data and is intended for guidance only - Valves Online can accept no liability for changes, omissions or errors.

**Head loss** Fluid: water (1m H2O = 0,098bar) - Head loss with shutter fully opened

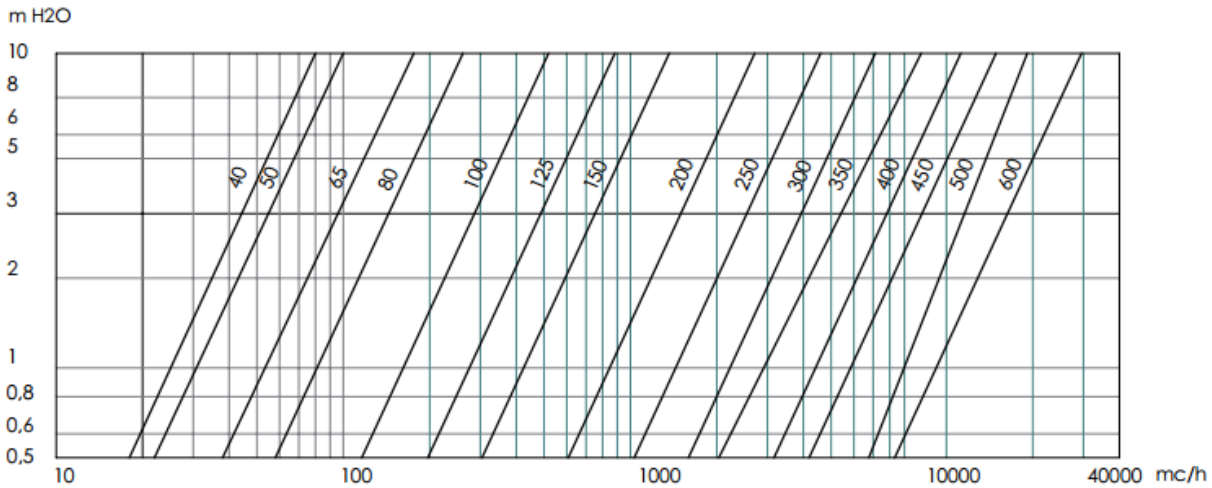

**Flow rate / opening position chart** Flow percentage on the flow at full opening under the same loss of head.

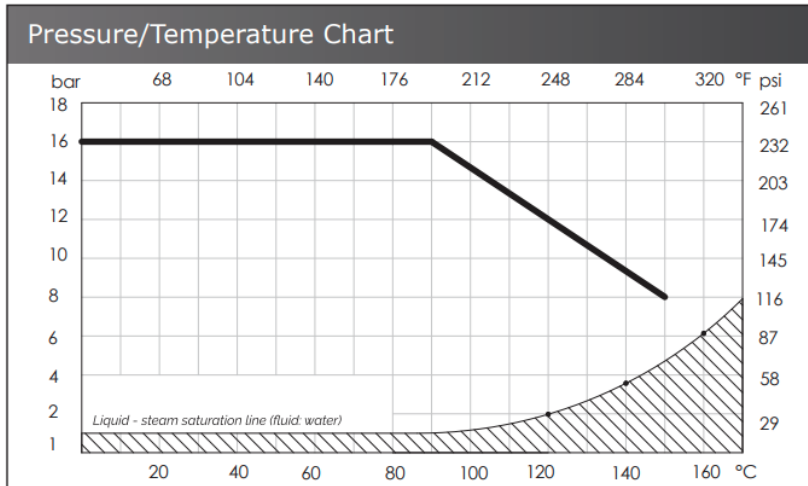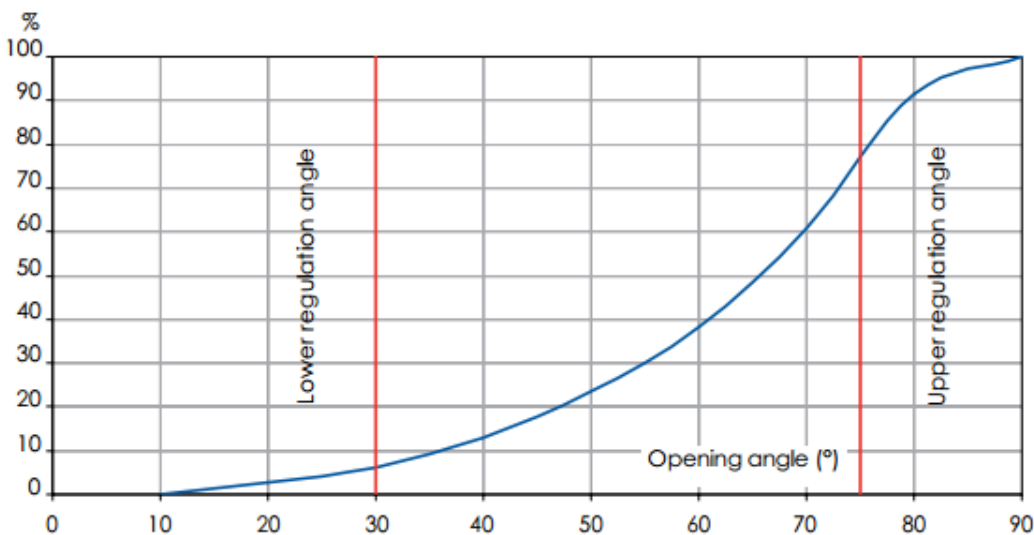

Note: Do not use when temperature and pressure are below the liquid-steam saturation line (hatched area)

All information is sourced from our manufacturer's data and is intended for guidance only - Valves Online can accept no liability for changes, omissions or errors.

**INSTALLATION AND TRANSPORT**

- Keep in dry and closed place.
- While stored, the disc must be partially open (Fig. 1).
- Avoid knocks, take special care to protect lever, hand wheel, gear boxes/actuators.
- Do not use lever or hand wheel to lift the valve.

**MAINTENANCE**

The valve does not require maintenance.

**RECOMMENDATIONS**

Before carrying out maintenance or dismantling the valve, be sure that the pipes, valves and liquids have cooled down, that the pressure has decreased and that the lines and pipes have been drained in case of toxic, corrosive, inflammable or caustic liquids.

Temperatures above 50°C and below 0°C might cause damage to people.

**INSTALLATION**

- Handle with care.
- Do not weld the flanges to the piping after installing the valve.
- Water hammers might cause damage and ruptures. Inclination, twisting and misalignments of the piping may subject the valve to stress, once installed. It is recommended that elastic joints be used in order to reduce these effects as much as possible. The disc must be partially open (Fig. 1).

FIG. 1


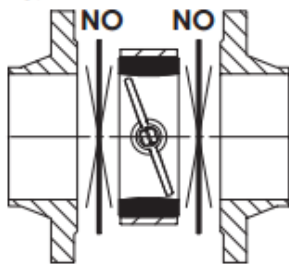


FIG. 2



FIG. 3

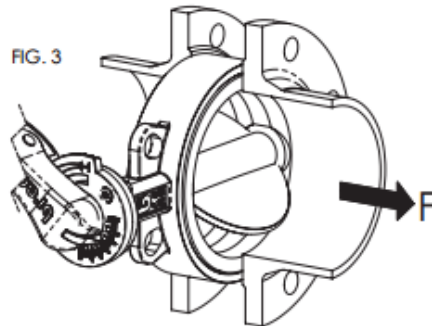

The stem has a machined notch N (Fig. 2), which indicates the position of the disc; consider this indication, in order to mount the levers and actuators correctly.

The mounting can be made with the stem axis in a horizontal or vertical position. In case the fluid contains suspended solid particles (for example, sand, impurities, etc.) or solid particles that may leave deposits, it is recommended that the valve be installed with its axis horizontal, and in such a way that the bottom end of the disc opens in the direction of flow, F, (Fig. 3)

The item L9 allows the dismantling of the pipes downstream, for pressures below 6 bar. For end of line installation:

- SERIES J9 (all pressures), series L9 (pressure > 6 bar): counter flange **MUST** be installed
- SERIES L9 (pressure < 6 bar): it is recommended that a counter flange be installed.

Verify maximum working pressure and limits of use under section "maximum pressure".

Place the valve between two flanges. While placing the valve, ensure there is sufficient space in order not to damage the rubber. Do not mount seals between valve and flanges (Fig. 1). Carefully clean the contact surface. Do not install the butterfly valve in direct contact with a rubber surface (for example, expansion joints); the best installation is when the rubber is in contact with metal (Fig. 4).

In order to achieve correct working, the internal diameter of the pipe must be greater than the value indicated in the chart. Do not weld the flanges to the tube if the valve has already been installed. It is recommended that the flanges listed in the chart be used. As far as possible, avoid flat flanges for welding (EN 1092 01 type); if these flanges are used, ensure perfect centring between the flange and valve, and be sure to weld exactly edgewise to the flange. Do not let protrusions or sharp edges on the piping cause damage to the rubber surface of the valve (Fig. 5).

FIG. 4


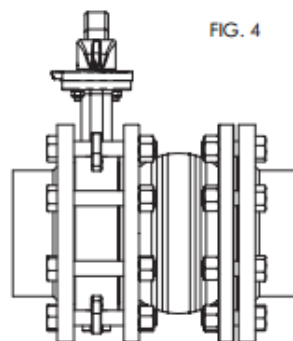


FIG. 5

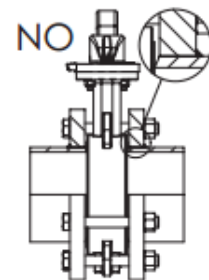

Centre the valve on holes while using wafer type valves.  
Tighten the bolts crosswise and progressively, in order to distribute the pressure equally before the body and flanges come into contact with each other. (Fig. 6)

With regard to the Lug version, check that the screws are the correct length, in order to allow complete compression of the lining rubber.

Turbulences of the fluid might increase erosion and reduce the life-cycle of the valve. Install the valve at a distance of at least 1 x DN upstream, and at a distance of 2-3 x DN downstream, away from fittings or bends.

In the open position, the valve is larger than the nominal Face to Face value.

Check that no other components of the piping interfere or create damage or malfunction (Fig. 7A).  
If they do, a spacer should be inserted for the valve to operate correctly (Fig. 7B).

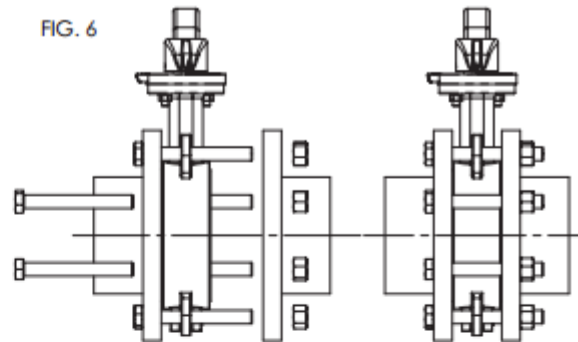


FIG. 7A

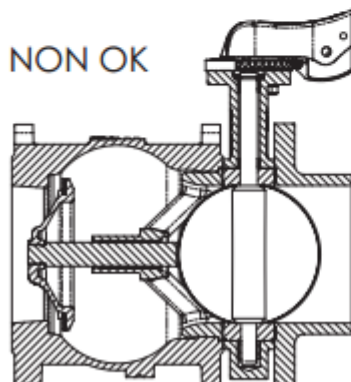


FIG. 7B

